

# COMPONENT INDEX

## A

Air Conditioning:	
Power Relay	(F-15)
Switch	(F-16)
AM/FM Stereo Cassette	(F-26)
Alternator/Regulator	(F-8)

## B

Backup Lamp Switch	(F-9)
Battery	(F-4)
Blower Motor	(F-16)
Control Switch	(A-26)
Resistor	(F-17)
Brake:	
Fluid Level Sensor	(A-15)
Warning Lamp Checker	(A-15)
Buzzer/Timer	(F-20)

## C

Canister Purge Solenoid	(A-7)
Checker, Brake Warning Lamp	(A-15)
Cigar Lighter	(A-27)
Cluster, Instrument	(F-21)
Clutch:	
Compressor	(F-14)
Engage Switch (MTX Only)	(A-5)
Interlock Switch (MTX Only)	(D-5)
Coil, Ignition	(F-10)
Compressor Clutch	(F-14)
Condenser:	
Ignition	(F-11)
Fan (ATX Only)	(D-12)
Fan Relay (ATX Only)	(F-12)
Connector:	
ECA Self Test	(F-19)
Fuel Pump Self Test	(A-6)
RPM Test	(F-11)
Self Test	(A-8)
Control Unit, Daytime Running Lamp (Canada Only)	(A-21)
Control, Instrument Panel Lamp	(A-27)
Cooling Fan:	
Relay	(A-4)
Temperature Switch	(A-4)
Crankshaft Position Sensor	(A-7)

## D

Daytime Running Lamp:	
Control Unit (Canada Only)	(A-21)
Relay (Canada Only)	(A-21)
Resistor (Canada Only)	(A-21)
Defroster, Rear Window	(A-37)
Door Switch:	
L.H.	(F-32)
R.H.	(A-32)

## E

Electric Cooling Fan	(D-3)
Electronic Control Assembly ECA	(F-18)
Self Test Connector	(F-19)
Engine Coolant Temperature Sensor	(A-9), (A-18)
Exhaust Gas Oxygen EGO Sensor	(A-13)

## F

Fan:	
Condenser (ATX Only)	(F-12)
Electric Cooling	(D-3)
Flasher Unit	(A-18)
Fuel:	
Pump Inertia Switch	(A-30)
Pump Relay	(A-6)
Pump Self Test Connector	(A-6)
Tank Sending Unit	(A-31)
Fuse Panel	(B-24)

## H

Headlamp:	
Relay	(A-20)
Switch	(A-20)
Horn	(B-5)
Relay	(A-19)
Switches	(A-20)

## I

Idle Speed Control ISC Solenoid	(E-9)
Ignition:	
Coil	(F-10)
Condenser	(F-11)
Key Reminder Switch	(A-15)
Module	(A-11)
Switch	(F-21)
Injector:	
#1, #2, #3	(A-9)
#4	(A-10)
Instrument Cluster	(F-21)
Instrument Panel Lamp Control	(A-27)

## K

Kickdown:	
Solenoid Valve	(F-9)
Switch (ATX Only)	(A-5)

## L

Lamps:	
A/C Heater Control	(A-27)
ATX Select Illumination	(F-35)
Backup, L.H.	(E-41)
Backup, R.H.	(B-41)
Dome	(F-24)
Headlamp, L.H.	(D-3)
Headlamp, R.H.	(C-3)
High Mount Stop	(C-38)
License, L.H.	(D-41)
License, R.H.	(C-41)
Luggage Compartment	(A-32)
Rear Defroster	(A-26)
Side Marker, L.H. Front	(E-3)
Side Marker, R.H. Front	(B-3)
Side Marker, L.H. Rear	(F-40)
Side Marker, R.H. Rear	(A-40)
Stop, L.H.	(E-41)
Stop, R.H.	(B-41)
Tail, L.H.	(E-41)
Tail, R.H.	(B-41)
Turn Signal, L.H. Front	(E-3)
Turn Signal, R.H. Front	(C-3)
Turn Signal and Hazard, L.H. Rear	(E-41)
Turn Signal and Hazard, R.H. Rear	(B-41)
Liftgate:	
Washer Motor	(F-36)
Wiper Motor	(F-37)
Wiper/Washer Switch	(A-27)
Lighter, Cigar	(A-27)
Luggage Compartment Lamp Switch	(A-39)

## M

Main Fuse Link Panel	(F-7)
Main Relay	(E-8)
Meter, Vane Airflow	(A-13)
Module:	
Ignition	(A-11)
Passive Restraint Control	(F-30)
Motor:	
Blower	(F-16)
Liftgate Washer	(F-36)
Liftgate Wiper	(F-37)
Passive Restraint, L.H. Rear	(F-30)
Passive Restraint, R.H. Rear	(A-30)
Remote Control Mirror, L.H.	(F-29)
Remote Control Mirror, R.H.	(A-29)
Starter	(F-6)
Windshield Washer	(A-14)
Windshield Wiper	(A-14)

## N

Neutral Safety Switch (ATX Only)	(F-8)
Neutral Switch (MTX Only)	(E-8)

## O

Oil Pressure Switch	(F-10)
---------------------	--------

# COMPONENT INDEX

## P

Panel:	
Fuse	(B-24)
Main Fuse Link	(F-7)
Parking Brake Switch	(A-31)
Parking Lamp Relay	(A-19)
Passive Restraint:	
Control Module	(F-30)
Door Catch Switch, L.H.	(F-29)
Door Catch Switch, R.H.	(A-29)
Limit Switch, L.H. Front	(F-25)
Limit Switch, R.H. Front	(F-25)
Limit Switch, L.H. Rear	(F-30)
Limit Switch, R.H. Rear	(A-30)
Motor, L.H. Rear	(F-30)
Motor, R.H. Rear	(A-30)
Power Mirror Switch	(F-27)
Power Steering Pressure Switch	(A-13)

## R

RPM Test Connector	(F-11)
Rear Window Defroster	(A-37)
Switch	(A-26)
Refrigerant Pressure Switch	(F-13)
Regulator/Alternator	(F-8)
Relay:	
A/C Power	(F-15)
Condenser Fan (ATX Only)	(F-12)
Cooling Fan	(A-4)
Daytime Running Lamp (Canada Only)	(A-21)
Fuel Pump	(A-6)
Headlamp	(A-20)
Horn	(A-19)
Main	(E-8)
Parking Lamp	(A-19)
Wide Open Throttle A/C Cutoff WAC	(F-13)
Remote Control Mirror:	
Motor, L.H.	(F-29)
Motor, R.H.	(A-29)
Resistor:	
Blower Motor	(F-17)
Daytime Running Lamp (Canada Only)	(A-21)

## S

Seat Belt Buckle Switch	(F-31)
Self Test Connector	(A-8)
Sending Unit, Fuel Tank	(A-31)
Sensor:	
Brake Fluid Level	(A-15)
Crankshaft Position	(A-7)
Engine Coolant Temperature	(A-9), (A-18)
Exhaust Gas Oxygen EGO	(A-13)
Throttle Position	(A-8)
Shift Lock Servo Assembly	(F-32)
Shoulder Belt:	
Warning Buzzer Switch, L.H.	(F-31)
Warning Buzzer Switch, R.H.	(A-30)
Solenoid:	
Canister Purge	(A-7)
Idle Speed Control ISC	(E-9)
Speaker:	
L.H. Front	(F-25)

R.H. Front	(A-25)
L.H. Rear	(F-35)
R.H. Rear	(A-35)
Starter Motor	(F-6)
Stoptlamp Switch	(F-19)
Switch:	
A/C	(F-16)
Backup Lamp	(F-9)
Blower Motor Control	(A-26)
Clutch Engage (MTX Only)	(A-5)
Clutch Interlock (MTX Only)	(D-5)
Cooling Fan Temperature	(A-4)
Door, L.H.	(F-32)
Door, R.H.	(A-32)
Fuel Pump Inertia	(A-30)
Headlamp	(A-20)
Horn	(A-20)
Ignition	(F-21)
Ignition Key Reminder	(A-15)
Kickdown (ATX Only)	(A-5)
Liftgate Wiper/Washer	(A-27)
Luggage Compartment Lamp	(A-39)
Neutral (MTX Only)	(E-8)
Neutral Safety (ATX Only)	(F-8)
Oil Pressure	(F-10)
Parking Brake	(A-31)
Passive Restraint Door Catch, L.H.	(F-29)
Passive Restraint Door Catch, R.H.	(A-29)
Passive Restraint Limit, L.H. Front	(F-25)
Passive Restraint Limit, R.H. Front	(F-25)
Passive Restraint Limit, L.H. Rear	(F-30)
Passive Restraint Limit, R.H. Rear	(A-30)
Power Mirror	(F-27)
Power Steering Pressure	(A-13)
Rear Defroster	(A-26)
Refrigerant Pressure	(F-13)
Seat Belt Buckle	(F-31)
Shoulder Belt Warning Buzzer, L.H.	(F-31)
Shoulder Belt Warning Buzzer, R.H.	(A-30)
Stoptlamp	(F-19)
Turn Signal and Hazard Flasher	(A-17)
Windshield Wiper/Washer	(A-15)

## T

Thermostat	(F-15)
Throttle Position Sensor	(A-8)
Timer/Buzzer	(F-20)
Turn Signal and Hazard Flasher Switch	(A-17)

## V

Valve, Kickdown Solenoid	(F-9)
Vane Airflow Meter	(A-13)

## W

Wide Open Throttle A/C Cutoff WAC Relay	(F-13)
Windshield:	
Washer Motor	(A-14)
Wiper Motor	(A-14)
Wiper/Washer Switch	(A-15)







