

14 BONNET, RADIATOR GRILLE

BONNET

REMOVAL AND INSTALLATION

1. Remove the windshield washer pipe.
2. Mark the bonnet hinge locations on the bonnet for proper reinstallation.
3. Remove the bonnet hinge installation bolts and remove the bonnet.
4. Install the bonnet in the reverse order of removal. Adjust the bonnet if necessary.

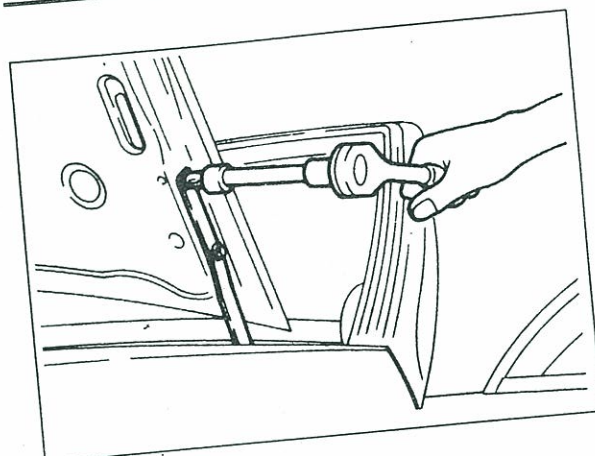


Fig. 14-1

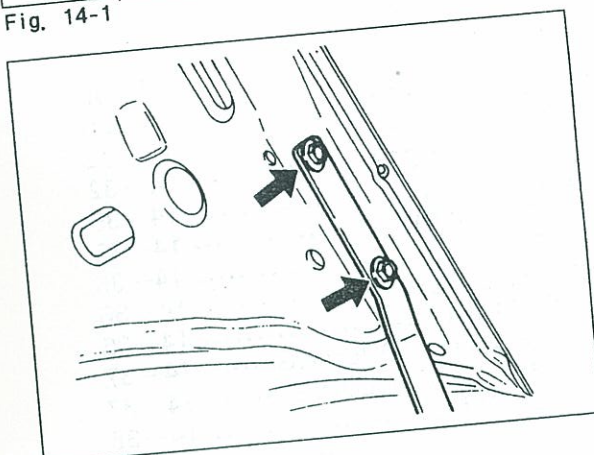


Fig. 14-2

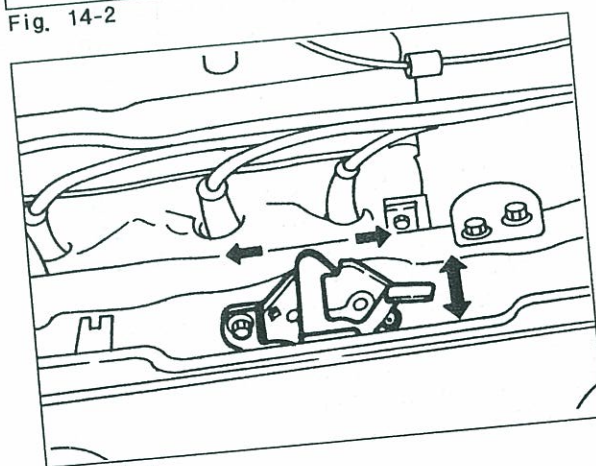


Fig. 14-3

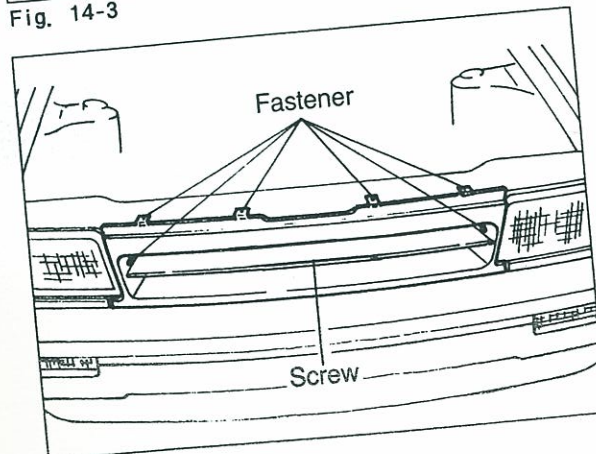


Fig. 14-4

ADJUSTMENT

1. Adjust the bonnet fore-and-aft and side-to-side by loosening the nuts attaching the bonnet to the hinge and repositioning the bonnet.

2. Adjust the bonnet lock after the bonnet has been aligned. The bonnet lock can be moved up-and-down and side-to-side. Align the lock with the striker on the bonnet by loosening the lock installation bolts and nut.

RADIATOR GRILLE

REMOVAL AND INSTALLATION

1. Remove the radiator grille installation screw.

REAR HATCH AND FUEL FILLER LID RELEASE 14

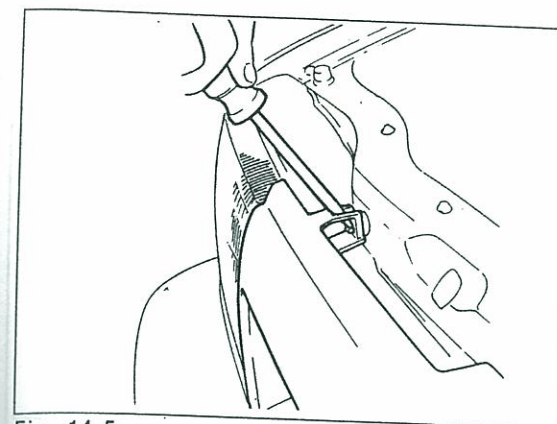


Fig. 14-5

2. Open the tabs of the fasteners using the tip of a small standard screwdriver, and then remove the radiator grille.
3. When installing, insert the fasteners into the grille, and then press them in after aligning them with the installation holes of the body.

REAR HATCH AND FUEL FILLER LID RELEASE

REMOVAL AND INSTALLATION

1. Remove the installation bolt, and then disconnect the rear hatch and fuel lid release wires.

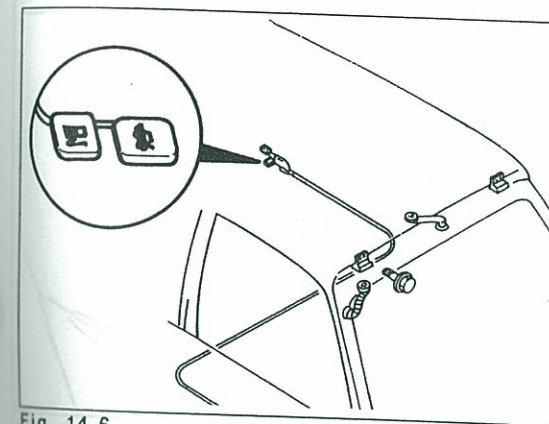


Fig. 14-6

2. Disconnect the release wire from the rear hatch lock.

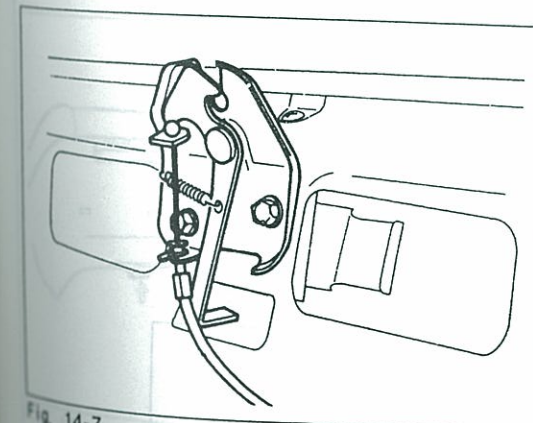


Fig. 14-7

3. Open the fuel filler lid, remove the installation nut, and remove the fuel lid opener assembly.
4. Install in the reverse order of removal.

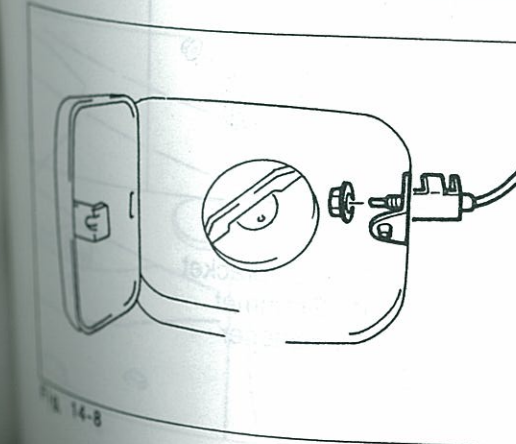


Fig. 14-8